



 
# **Model Number**

# NJ8-18GK-N

# **Features**

- 8 mm not embeddable
- Usable up to SIL2 acc. to IEC 61508

# Connection




# **Accessories**

# **BF 18**

Mounting flange

# **Dimensions**

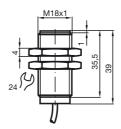

# **Technical Data**

General specifications			
Switching element function		NAMUR NC	
Rated operating distance	s <sub>n</sub>	8 mm	
Installation		not embeddable	
Output polarity		NAMUR	
Assured operating distance	s <sub>a</sub>	0 6.48 mm	
Reduction factor r <sub>Al</sub>		0.4	
Reduction factor r <sub>Cu</sub>		0.3	
Reduction factor r <sub>V2A</sub>		0.85	
Manada at a da a			

#### **Nominal ratings**

Nominal voltage	$U_o$	8 V
Switching frequency	f	0 200 Hz
Hysteresis	Н	1 7 typ. 4 %

# Current consumption Measuring plate not

Measuring plate not detected	≥ 3 mA
Measuring plate detected	≤ 1 mA

## Standard conformity

EMC in accordance with	IEC / EN 60947-5-2:2004
Standards	DIN EN 60947-5-6 (NAMUR)

## **Ambient conditions**

Ambient temperature	-25 100 °C (248 373 K)

# **Mechanical specifications**

Connection type	Z III, PVC Cab
Core cross-section	0.75 mm <sup>2</sup>
Housing material	PBT/PPS
Sensing face	PBT
Protection degree	IP68

## General information

Use in the hazardous area	see instruction manuals

Category 2G; 1D

www.pepperl-fuchs.com

#### ATEX 2G

Instruction

#### **Device category 2G**

Directive conformity Standard conformity

CE symbol

Ex-identification

**EC-Type Examination Certificate** 

Appropriate type Effective internal capacitance Ci

Effective internal inductance Li

General

Highest permissible ambient temperature

Installation Comissioning

Maintenance

Special conditions

Protection from mechanical danger

#### Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist

EN 50014:1997, EN 50020:1994 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions €0102

⟨Ex⟩ II 2G EEx ia IIC T6

PTB 00 ATEX 2048 X

NJ 8-18GK-N...

≤ 70 nF; a cable length of 10 m is considered.

 $\leq 50~\mu H$  ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!
Directive 94/9EG and hence also EC-Type Examination Certificates apply in

general only to the use of electrical apparatus under atmospheric conditions.

The use in ambient temperatures of > 60 °C was tested with regard to hot surfaces by the mentioned certification authority.

If the equipment is not used under atmospheric conditions, a reduction of the permissible minimum ignition energies may have to be taken into consideration.

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20°C the sensor should be protected from knocks by the provision of an additional housing.

FPEPPERL+FUCHS

#### ATEX 1D

Instruction

### Device category 1D

Directive conformity Standard conformity

CE symbol

Ex-identification

EC-Type Examination Certificate

Appropriate type

Effective internal capacitance Ci

Effective internal inductance Li

General

Maximum housing surface temperature

Installation, Comissioning

Maintenance

[Fett]Special conditions Electrostatic charging

#### Manual electrical apparatus for hazardous areas

for use in hazardous areas with combustible dust 94/9/EG

IEC 61241-11:2002: draft; prEN61241-0:2002 type of protection intrinsic safety "iD" Use is restricted to the following stated conditions **C €**0102

NJ 8-18GK-N...

≤ 70 nF; a cable length of 10 m is considered.

 $\leq$  50  $\mu$ H ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual.

The EC-Type Examination Certificate has to be observed.

The special conditions must be adhered to!

The maximum surface temperature of the housing is given in the EC-Type Examination Certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed.

The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

The associated apparatus must satisfy at least the requirements of category ia IIB or iaD. Because of the possibility of the danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation in the power supply and signal circuits is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met.

The intrinsically safe circuit has to be protected against influences due to lightning.

When used in the isolating wall between Zone 20 and Zone 21 or Zone 21 und Zone 22 the sensor must not be exposed to any mechanical danger and must be sealed in such a way, that the protective function of the isolating wall is not impaired. The applicable directives and standards must be observed.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

The connection cables are to be laid in accordance with EN 50281-1-2 and must not normally be subjected to chaffing during use.

www.pepperl-fuchs.com