

 ϵ

Order Code

UB1000-18GM75-I-V15

Features

- Analogue output 4 mA ... 20 mA
- · Measuring window adjustable
- · Selectable sound lobe width
- TEACH-IN input
- Synchronisation options
- · Deactivation option
- Temperature compensation
- Very small unusable area

Electrical Connection

Standard symbol/Connections:


(version I) + U_D 2 (WH) Teaching input п (GY) Sync **(** (BK) Analog output (BU) - U

Core colours in accordance with EN 60947-5-2.

Connector V15



Dimensions

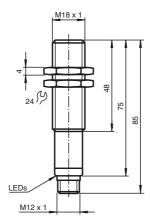

Technical Data

General specifications Sensing range Adjustment range 70 ... 1000 mm 90 ... 1000 mm Unusable area 70 mm 100 mm x 100 mm approx. 255 kHz Standard target plate Transducer frequency approx. 125 ms Response delay Indicators/operating means

permanently yellow: object in the evaluation range yellow, flashing: TEACH-IN function, object detected LED vellow

permanently red: Error LED red

red, flashing: TEACH-IN function, object not detected

Electrical specifications Operating voltage 10 ... 30 V DC , ripple 10 %SS

No-load supply current I₀ \leq 45 mA

Input/output Synchronisation 1 synchronous connection, bi-directional

0-level: -U_B...+1 V 1-level: +4 V...+U_B input impedance: > 12 k Ω

synchronisation pulse: \geq 100 μ s, synchronisation interpulse period: \geq 2 ms

Synchronisation frequency Common mode operation

Multiplex operation ≤ 40 Hz /n, n = number of sensors

Input

1 TEACH-IN input Input type lower evaluation limit A1: -U_B ... +1 V, upper evaluation limit A2: +4 V ... +U_B

input impedance: > 4.7 k Ω , pulse duration: \geq 1 s

Output Output type 1 analogue output 4 ... 20 mA Resolution 0.35 mm

Deviation of the characteristic ± 1 % of full-scale value Repeat accuracy ± 0.1 % of full-scale value

Load impedance 0 ... 300 Ohm Temperature influence ± 1.5 % of full-scale value

Standard conformity Standards EN 60947-5-2

Ambient conditions -25 ... 70 °C (248 ... 343 K) -40 ... 85 °C (233 ... 358 K) Ambient temperature Storage temperature

Mechanical specifications

Protection degree Connection connector V15 (M12 x 1), 5 pin

Material

Housing brass, nickel-plated Transducer epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT

Mass

Synchronisation

The sensor features a synchronisation input for the suppression of mutual interference. If this input is not used, the sensor will operate using an internally generated clock rate. The synchronisation of multiple sensors can be realised as follows:

External synchronisation

The sensor can be synchronised by the external application of a square wave voltage. A synchronisation pulse at the synchronisation input starts a measuring cycle. The pulse must have a duration greater than 100 μ s. The measuring cycle starts with the falling edge of a synchronisation pulse. A low level > 1 s or an open synchronisation input will result in the normal operation of the sensor. A high level at the synchronisation input disables the sensor. Two operating modes are available:

- Multiple sensors can be controlled by the same synchronisation signal. The sensors are synchronised.
- 2. The synchronisation pulses are sent cyclically to individual sensors. The sensors operate in multiplex mode.

Internal synchronisation

The synchronisation connections of up to 5 sensors capable of internal synchronisation are connected to one another. When power is applied, these sensors will operate in multiplex mode.

The response delay increases according to the number of sensors to be synchronised. Synchronisation cannot be performed during TEACH-IN and vice versa. The sensors must be operated in an unsynchronised manner to teach the evaluation limits.

Note:

If the option for synchronisation is not used, the synchronisation input has to be connected to ground (0V) or the sensor has to be operated via a V1 cable connector (4-pin).

Adjusting the evaluation limits

The ultrasonic sensor features an analogue output with two teachable evaluation limits. These are set by applying the supply voltage $-U_B$ or $+U_B$ to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. The lower evaluation limit A1 is taught with $-U_B$, A2 with $+U_B$.

Two different output functions can be set:

- 1. Analogue value increases with rising distance to object (rising ramp)
- 2. Analogue value falls with rising distance to object (falling ramp)



Evaluation limits may only be specified within the first 5 minutes after Power on. To modify the evaluation limits later, the user may specify the desired values only after a new Power On.

TEACH-IN rising ramp (A2 > A1)

- Position object at lower evaluation limit
- TEACH-IN lower limit A1 with $U_{\mbox{\footnotesize B}}$
- Position object at upper evaluation limit
- TEACH-IN upper limit A2 with + U_B

TEACH-IN falling ramp (A1 > A2):

- Position object at lower evaluation limit
- TEACH-IN lower limit A2 with + U_B
- Position object at upper evaluation limit
- TEACH-IN upper limit A1 with UB

Default setting

A1: unusable area

A2: nominal sensing range


Mode of operation: rising ramp

LED Displays

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN evaluation limit		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	on	off
Normal mode (evaluation range)	off	on
Fault	on	previous state


Characteristic Curves/Additional Information

Characteristic response curve

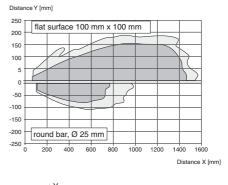



Programmed analogue output function

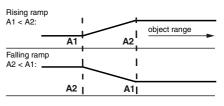

Accessories

UB-PROG2 Programming unit

OMH-04 Mounting aid

BF 18 Mounting flange

BF 18-F Mounting flange

BF 5-30 Mounting flange

UVW90-K18 Deviation reflector

V15-G-2M-PVC Cable connector


V15-W-2M-PUR Cable connector

Adjusting the sound cone characteristics:

The ultrasonic sensor enables two different shapes of the sound cone, a wide angle sound cone and a small angle sound cone.

1. Small angle sound cone

- switch off the power supply
- connect the Teach-input wire to -U_B
- switch on the power supply
- the red LED flashes once with a pause before the next.
- yellow LED: permanently on: indicates the presence of an object or disturbing object within the sensing range

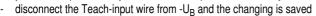

2. Wide angle sound cone

- switch off the power supply
- connect the Teach-input wire with +UB
- switch on the power supply
- the red LED double-flashes with a long pause before the next.
- yellow LED: permanently on: indicates an object or disturbing object within the sensing range
- disconnect the Teach-input wire from +U_R and the changing is saved



Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.