
Ultrasonic-Transducer (Emitter)





19²⁴

M18 × 1

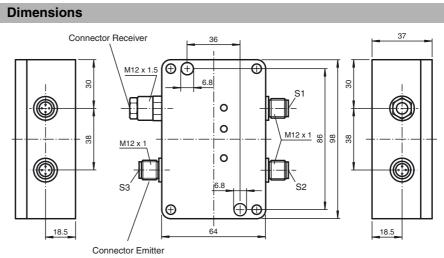

Order Code


UDBK-18GM35-3E2

Features

- Ultrasonic system for detection of single and pasted double sheet.
- Weights of paper from 30 g up to cartons weighing over 1200 g can be detected.
- It is also possible to detect thin metal and plastic films.
- Various materials and thicknesses are programmed in via a TEACH-IN signal.
- Automatic compensation of the operating point in the case of slowly changing ambient conditions.
- Signal output via short-circuit proof PNP switch outputs.
- Very high processing speeds are possible.

Electrical Connection

Standard symbol/Connection: Double-sheet-control

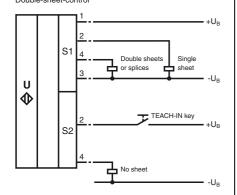

Connector V1



180 kHz indication: single sheet detected indication: no sheet detected indication: double sheet or contact spot detected 20 ... 30 V DC , ripple 10 %_{SS} < 80 mA 1 pulse input for Teach-In ≥ 10 kOhm 12 ... 30 V

35

3 switch outputs pnp, NO 3 x 200 mA

≤ 2 V ≤ 1 ms

2.5 m

Technical Data

General specifications

Electrical specifications

No-load supply current I0

Output type Rated operational current Ie

Transducer frequency Indicators/operating means

LED green

LED yellow

Operating voltage

LED red

Input

Input type

Voltage

Output

Standards Ambient conditions Ambient temperature

Material

Mass

Housing

Pulse length Impedance

Voltage drop U_d

Switch-on delay ton

Switch-off delay toff

Standard conformity

Storage temperature

Protection degree Connection

Mechanical specifications

≤ 100 ms

EN 60947-5-2

0 ... 60 °C (273 ... 333 K) -40 ... 70 °C (233 ... 343 K)

IP65

emitter: V1-W connector with 2.5 m cable receiver: 2.5 m fixed cable (not disconnectable) S1,S2: 2 connectors V1-W, M12x1 (included with delivery)

Makrolon/nickel-plated brass 370 g

Subject to reasonable modifications due to technical advances

Copyright Pepperl+Fuchs, Printed in Germany

Pepperl+Fuchs Group • Tel.: Germany +49 621 776-0 • USA +1 330 4253555 • Singapore +65 67799091 • Internet http://www.pepperl-fuchs.com

Description of the sensor functions

Ultrasonic double-sheet monitoring to detect splice points is used in all situations in which an automatic distinction must be made between splice points and double sheets in order to protect machines or avoid waste production. Double-sheet monitoring for splice point detection is based on the ultrasonic through-beam principle. The following can be detected:

- No sheet
- Individual sheet
- Splice point or double sheet

A microprocessor system evaluates the signals. The appropriate switch outputs are set as a result of the evaluation. Changes in ambient conditions such as temperature and humidity are automatically compensated. The evaluation electronics are installed in a cuboid plastic housing separate from the sensor heads.

Measuring system

A complete system consists of an ultrasonic emitter, an ultrasonic receiver and an evaluation unit. These units have been optimally tuned to one another at the factory and may not be used separately.

Alignment

When adjusting the emitter and receiver, take care to align them as precisely as possible.

Distance of the sensor heads:	d = 20 mm 80 mm
Angular tolerance:	α < +/- 2°
Maximum offset:	s < +/- 2 mm

To ensure their correct function, the sensor heads must be aligned at an angle of 20° ... 45° from vertical onto the paper surface. The paper is guided over the emitter at a distance of 5 mm ... 15 mm. The emitter is installed below in order to prevent dust deposits. Install the sensor heads using the included plastic nuts. The sound cone must be completely covered by the paper. This means that the sensor heads must be installed above the sheet of paper and at least 10 mm away from the side edge of the paper.

Feed speed of the sheet (approximate value)

 $v_{min} = 0.035 \text{ m/s}$

v_{max} [m/s] = overlapping of sheets [mm] / 1 ms (approx. value, overlapping > 20 mm)

Teach-In

- 1. After the operating voltage has been applied, a single sheet can be fed in as the first sheet. It will automatically be programmed as a reference value by the system.
- 2. If a single sheet of paper is located between the ultrasonic emitter and receiver when the operating voltage is turned on, it will automatically be programmed as a reference value by the system.

Automatic learning for thinner types of sheets

If you are inserting a thinner type of sheet, you can dispense with the use of the Teach-In signal to program the system. In order to do this, a single sheet of paper must be between the emitter and receiver for at least 2 s.

Automatic learning for thicker types of sheets

If you are inserting a thicker type of sheet but still not one that will result in double-sheet output, you can dispense with learning by means of the Teach-In signal. In order to do this, a single sheet of paper must be between the emitter and receiver for at least 2 s.

Teach-In for new type of sheet

If you are inserting a new type of sheet that will result in double-sheet output, the system must be reprogrammed. To do this, a single sheet must be placed between the emitter and receiver. After the Teach-In signal has been applied, the corresponding reference value will be accepted.

Caution!

The paper sheets may not touch the sensor heads during operation. Depending on physical conditions, reflections on the edge of a single sheet may result in double-sheet output. This is not an error, and can be masked out in the higherlevel control system.

Sensor systems for ultrasonic double-sheet monitoring can also be delivered with a customised time response for optimal adaptation to specific applications.


Notes:

When installing, care has to be taken that the ultrasonic signal cannot pass around the material that is to be detected, due to multiple reflections. This can happen if large surfaces are present at right angles to the direction of sound propagation. This can be the case if unsuitable mounting brackets are used, or if assemblies with large surface are part of the machine. In the latter case such machine parts should be covered by sound absorbing material or a different location for the installation should be chosen.


Subject to reasonable modifications due to technical advances

Characteristic Curves/Additional Information


Characteristic response curves

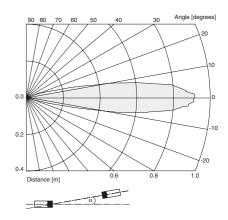

Mounting/Adjustment

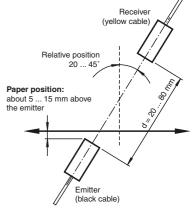



 

Accessories

MH-UDB01 Mounting aid In cases where more than one system is needed per machine, acoustic isolation should be provided to avoid cross-talk. This can be provided, for example, by appropriately positioning isolation panels.

3

Copyright Pepperl+Fuchs, Printed in Germany