Ultrasonic sensor UB200-12GM-E5-V1




Features

- Switch output
- Very small unusable area
- 5 different output functions can be set
- TEACH-IN input
- Temperature compensation


Electrical connection

Standard symbol/Connections: (version E5, pnp)



Core colours in accordance with EN 60947-5-2.

Dimensions

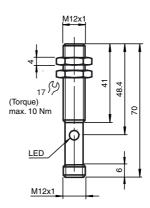

Technical data

CE

General specifications

Sensing range Adjustment range 20 ... 200 mm Unusable area 0 ... 15 mm Standard target plate Transducer frequency Response delay approx. 30 ms

Indicators/operating means

LED yellow

I FD red

Electrical specifications

Operating voltage No-load supply current I₀

Input Input type

Output Output type Repeat accuracy

Rated operational current I_e Voltage drop U_d Switching frequency f Range hysteresis H Temperature influence Standard conformity

Standards

Ambient conditions Ambient temperature Storage temperature

Mechanical specifications

Protection degree Connection Material

Housing Transducer

Mass

15 ... 200 mm

100 mm x 100 mm approx. 400 kHz

indication of the switching state flashing: TEACH-IN function object detected permanently red: Error red, flashing: TEACH-IN function, object not detected

10 ... 30 V DC , ripple 10 $\%_{\mbox{SS}}$

≤ 30 mA

1 TEACH_IN input operating distance 1: -U_B ... +1 V, operating distance 2: +6 V ... +U_B input impedance: > 4,7 k Ω TEACH-IN pulse: \geq 1 s

1 switch output E5, pnp NO/NC, parameterisable

< 1 %

100 mA , short-circuit/overload protected

≤ 3 V

< 13 Hz

1 % of the set operating distance

± 1.5 % of full-scale value

EN 60947-5-2

-25 ... 70 °C (248 ... 343 K) -40 ... 85 °C (233 ... 358 K)

V1 connector (M12 x 1), 4-pin

brass, nickel-plated

epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT

Connector V1



UB200-12GM-E5-V1

Model number

Adjusting the switching points

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage - U_B or + U_B to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with - U_B , A2 with + U_B .

Five different output functions can be set

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. one switching point, normally-open function
- 4. one switching point, normally-closed function
- 5. Detection of object presence

TEACH-IN window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -U_B
- Set target to far switching point
- TEACH-IN switching point A2 with +UB

TEACH-IN window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with +UB
- Set target to far switching point
- TEACH-IN switching point A1 with -U_B

TEACH-IN switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +U_B
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -UR

TEACH-IN switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -U_B
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with +U_B

TEACH-IN detection of objects presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -UB
- TEACH-IN switching point A2 with +UB

Default setting of switching points

A1 = blind range, A2 = nominal distance

LED Displays


Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN switching point:		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	On	off
Normal operation	off	Switching state
Fault	on	Previous state

Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF 12, BF 12-F or BF 5-30 must be used. In case of direct mounting of the sensor in a through hole, it has to be fixed at the middle of the housing thread.


Characteristic curves/additional information

Characteristic response curve

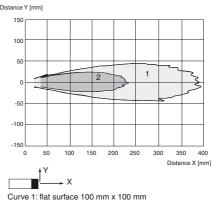

Curve 1: flat surface 100 mm x 100 mm Curve 2: round bar, Ø 25 mm

Programmed switching output function

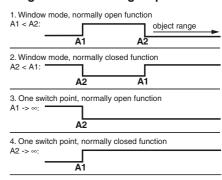

5. A1 -> ∞, A2 -> ∞: Detection of object presence Object detected: Switch output closed No object detected: Switch output open

Accessories

Programming device

UB-PROG2

Mounting aids/fixing flanges

BF 5-30

BF 12

BF 12-F

Cable sockets*)

V1-G-2M-PVC

V1-W-2M-PUR

*) Additional cable sockets find in section "Accessories".