

CE

## **Model Number**

## UB400-12GM-E5-V1

Single head system


#### **Features**

- Switch output
- 5 output modes •
- **Program input**
- **Temperature compensation**

#### Curves

## Characteristic response curve

Distance Y [mm]

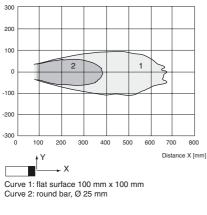

# **Technical data**

General specifications Sensing range Adjustment range Unusable area Standard target plate Transducer frequency Response delay Indicators/operating means LED yellow

LED red

Electrical specifications Operating voltage U<sub>B</sub> No-load supply current I<sub>0</sub> Input Input type

Output Output type Rated operational current Ie Voltage drop U<sub>d</sub> Repeat accuracy Switching frequency f Range hysteresis H Temperature influence Ambient conditions Ambient temperature Storage temperature Mechanical specifications Protection degree Connection Material Housing Transducer

Mass Compliance with standards and directives Standard conformity Standards

30 ... 400 mm 50 ... 400 mm 0 ... 30 mm 100 mm x 100 mm approx. 310 kHz approx. 50 ms

indication of the switching state flashing: program function object detected permanently red: Error red, flashing: program function, object not detected

10 ... 30 V DC , ripple 10  $\%_{\rm SS}$ ≤ 30 mA

1 program input operating distance 1: -U<sub>B</sub> ... +1 V, operating distance 2: +6 V ... +U<sub>B</sub> input impedance: > 4,7 k $\Omega$  program pulse:  $\geq$  1 s

1 switch output E5, pnp NO/NC, programmable 100 mA , short-circuit/overload protected ≤ 3 V ≤1 % < 8 Hz 1 % of the set operating distance  $\pm \ 1.5 \ \%$  of full-scale value

-25 ... 70 °C (248 ... 343 K) -40 ... 85 °C (233 ... 358 K)

IP67 V1 connector (M12 x 1), 4-pin

brass, nickel-plated epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT 25 g


EN 60947-5-2:2007 IEC 60947-5-2:2007

Copyright Pepperl+Fuchs, Printed in Germany


1


# UB400-12GM-E5-V1

### Dimensions

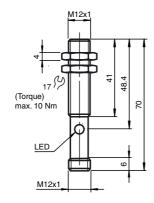

## **Electrical Connection**





Core colours in accordance with EN 60947-5-2.

## Pinout

**Connector V1** 



#### Adjusting the switching points

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage  $-U_B$  or  $+U_B$  to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with -U<sub>B</sub>, A2 with +U<sub>B</sub>.

Five different output functions can be set

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. one switching point, normally-open function
- 4. one switching point, normally-closed function
- 5. Detection of object presence

#### TEACH-IN window mode, normally-open function

- Set target to near switching point
- TEACH-IN switching point A1 with -UB
- Set target to far switching point
- TEACH-IN switching point A2 with +UB


#### TEACH-IN window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with +UB

Subject to reasonable modifications due to technical advances

# **Additional Information**

#### Programmable output modes

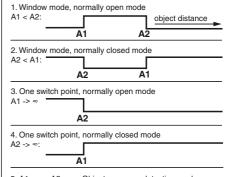

5. A1 -> ∞, A2 -> ∞: Object presence detection mode Object detected: Switch output closed No object detected: Switch output open

## Accessories

**UB-PROG2** Programming unit

BF 5-30 Mounting flange

**BF 12** Mounting flange

BF 12-F Mounting flange

V1-G-2M-PVC Cable connector

V1-W-2M-PUR Cable connector

UVW90-M12 Ultrasonic -deflector

- Set target to far switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>

## TEACH-IN switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +U<sub>B</sub>
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U<sub>B</sub>

## TEACH-IN switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with  $+U_B$

#### **TEACH-IN** detection of objects presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U<sub>B</sub>
- TEACH-IN switching point A2 with  $+U_B$

#### Default setting of switching points

#### A1 = blind range, A2 = nominal distance

LED Displays

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN switching point:		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	On	off
Normal operation	off	Switching state
Fault	on	Previous state

#### Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF 12, BF 12-F or BF 5-30 must be used. In case of direct mounting of the sensor in a through hole, it has to be fixed at the middle of the housing thread.