Dimensions



CE

Order Code


UB500-18GM75-E01-V15

Features

- 2 switch outputs Selectable sound lobe width
- TEACH-IN input
- Temperature compensation
- Very small unusable area

Electrical	Connection

Standard symbol/Connections: (version E01, npn)

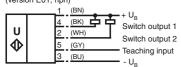

Core colours in accordance with EN 60947-5-2.

Technical Data

General specifications Sensing range Adjustment range

Adjustment range Unusable area Standard target plate Transducer frequency Response delay Indicators/operating means LED yellow

LED red

Electrical specifications Operating voltage

No-load supply current I₀ Input Input type

Output

Output type Repeat accuracy Rated operational current Ie Voltage drop U_d Switching frequency f Range hysteresis H Temperature influence Standard conformity Standards Ambient conditions Ambient temperature Storage temperature Mechanical specifications Protection degree Connection Material Housing Transducer Mass

30 ... 500 mm 50 ... 500 mm 0 ... 30 mm 100 mm x 100 mm approx. 380 kHz approx. 50 ms

indication of the switching state flashing: TEACH-IN function object detected "Error", object uncertain in TEACH-IN function: No object detected

<u>M18 x 1</u>

24 M

LED

M12 x 1

\$

75 85

10 ... 30 V DC , ripple 10 $\%_{\rm SS}$ \leq 50 mA

1 TEACH-IN input, operating range 1: -U_B ... +1 V, operating range 2: +4 V ... +U_B input impedance: > 4.7 k Ω ; TEACH-IN pulse: ≥ 1 s

2 switch outputs npn, NO/NC, parameterisable ≤ 1 % 2 x 100 mA , short-circuit/overload protected ≤ 3 V max. 8 Hz 1 % of the set operating distance ± 1.5 % of full-scale value

EN 60947-5-2

-25 ... 70 °C (248 ... 343 K) -40 ... 85 °C (233 ... 358 K)

IP65 connector V15 (M12 x 1), 5 pin

brass, nickel-plated

epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT 60 $\ensuremath{\mathsf{g}}$

Connector V15



Subject to reasonable modifications due to technical advances.

Copyright Pepperl+Fuchs, Printed in Germany

Adjusting the switching points

The ultrasonic sensor features two switch outputs with one teachable switching point. The switching points are set by applying the supply voltage $-U_B$ or $+U_B$ to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with $-U_B$, A2 with $+U_B$.



Switching points may only be specified directly after Power on. A time lock secures the adjusted switching points against unintended modification 5 minutes after Power on. To modify the switching points later, the user may specify the desired values only after a new Power On.

TEACH-IN switching point for switch output 1

- Set target of desired switching point for switch output 1
- TEACH-IN switching point for switch output 1 with -UB

TEACH-IN switching point for switch output 2

- Set target of desired switching point for switch output 2
- TEACH-IN switching point for switch output 2 with +UB

TEACH-IN detection of object presence

- Cover the sensor with your hand, or remove all objects from the sensing range
- TEACH-IN switching point for switch output 1 with -UB
- TEACH-IN switching point for switch output 2 with +UB

Comments

Only one switch output can be configured for detection of presence of objects. If the sensor detects an objects within the maximum detection range, the switch output switches.

Default setting of switching points

Switch output 1: unusable area

Switch output 2: nominal sensing range

LED Displays

Displays in dependence on operating mode	Red LED	LED 1 yellow	LED 2 yellow
TEACH-IN switching point 1 Object detected No object detected Object uncertain (TEACH-IN invalid)	off flashes on	flashes off off	off off off
TEACH-IN switching point 2: Object detected No object detected Object uncertain (TEACH-IN invalid)	off flashes on	off off off	flashes off off
Normal operation	off	switch state 1	switch state 2
Fault	on	previous state	previous state

Adjusting the sound cone characteristics:

The ultrasonic sensor enables two different shapes of the sound cone, a wide angle sound cone and a small angle sound cone.

1. Small angle sound cone

- switch off the power supply
- connect the Teach-input wire to -U_R
- switch on the power supply
- the red LED flashes once with a pause before the next.
- yellow LED: permanently on: indicates the presence of
- an object or disturbing object within the sensing range
- disconnect the Teach-input wire from -UB and the changing is saved

2. Wide angle sound cone


- switch off the power supply
- connect the Teach-input wire with $+U_B$
- switch on the power supply

Subject to reasonable modifications due to technical advances

Copyright Pepperl+Fuchs, Printed in Germany

Characteristic Curves/Additional Information

Characteristic response curve

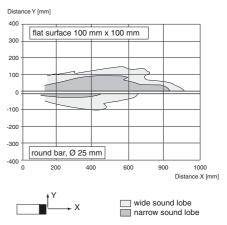

Programmed switching output function

Switch outpu (N.O.)	t 1	Object range
Switch outpu (N.C.)	t 2	

Switch point 1 -> ∞ : Switch point 2 -> ∞ :

Switch output 1, (N.O.) Detection of object presence Switch output 2, (N.C.) Detection of object presence

Accessories

UB-PROG3 Programming unit

OMH-04 Mounting aid

BF 18 Mounting flange

BF 18-F Mounting flange

BF 5-30 Mounting flange

UVW90-K18

Deviation reflector

V15-G-2M-PVC Cable connector

V15-W-2M-PUR Cable connector

- the red LED double-flashes with a long pause before the next.
- yellow LED: permanently on: indicates an object or disturbing object within the sensing range
- disconnect the Teach-input wire from $\mbox{+}U_B$ and the changing is saved

Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.

3

Copyright Pepperl+Fuchs, Printed in Germany