



## Order Code


**UB500-18GM75-E6-V15**

## Features

- 2 switch outputs
- 3 different output functions can be set
- Selectable sound lobe width
- TEACH-IN input
- Temperature compensation
- Very small unusable area

## Electrical Connection

Standard symbol/Connections:  
(version E6, pnp)

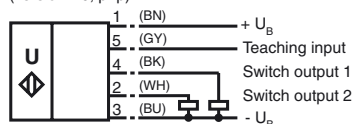


Core colours in accordance with EN 60947-5-2.

## Connector V15



## Dimensions

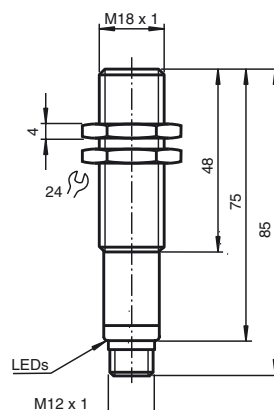

## Technical Data

<b>General specifications</b>	
Sensing range	30 ... 500 mm
Adjustment range	50 ... 500 mm
Unusable area	0 ... 30 mm
Standard target plate	100 mm x 100 mm
Transducer frequency	approx. 380 kHz
Response delay	approx. 50 ms
<b>Indicators/operating means</b>	
LED yellow	indication of the switching state flashing: TEACH-IN function object detected
LED red	"Error", object uncertain in TEACH-IN function: No object detected
<b>Electrical specifications</b>	
Operating voltage	10 ... 30 V DC, ripple 10 % <sub>SS</sub>
No-load supply current I <sub>0</sub>	≤ 50 mA
<b>Input</b>	
Input type	1 TEACH-IN input, operating range 1: -U <sub>B</sub> ... +1 V, operating range 2: +4 V ... +U <sub>B</sub> input impedance: > 4.7 kΩ; TEACH-IN pulse: ≥ 1 s
<b>Output</b>	
Output type	2 switch outputs pnp, NO/NC, parameterisable
Repeat accuracy	≤ 1 %
Rated operational current I <sub>e</sub>	2 x 100 mA, short-circuit/overload protected
Voltage drop U <sub>d</sub>	≤ 3 V
Switching frequency f	max. 8 Hz
Range hysteresis H	1 % of the set operating distance
Temperature influence	± 1.5 % of full-scale value
<b>Standard conformity</b>	
Standards	EN 60947-5-2
<b>Ambient conditions</b>	
Ambient temperature	-25 ... 70 °C (248 ... 343 K)
Storage temperature	-40 ... 85 °C (233 ... 358 K)
<b>Mechanical specifications</b>	
Protection degree	IP65
Connection	connector V15 (M12 x 1), 5 pin
Material	brass, nickel-plated
Housing	epoxy resin/hollow glass sphere mixture; foam polyurethane, cover PBT
Transducer	60 g

### Adjusting the switching points

The ultrasonic sensor features two switch outputs with one teachable switching point. The switching points are set by applying the supply voltage  $-U_B$  or  $+U_B$  to the TEACH-IN input.

The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with  $-U_B$ , A2 with  $+U_B$ .

Three different output functions can be set:

1. normally-open function
2. normally-closed function
3. Detection of object presence



Switching points may only be specified directly after Power on. A time lock secures the adjusted switching points against unintended modification 5 minutes after Power on. To modify the switching points later, the user may specify the desired values only after a new Power On.

### TEACH-IN normally-open function

Switching point for switch output 1 < switching point for switch output 2

- Set target of desired switching point for switch output 1
- TEACH-IN switching point for switch output 1 with  $-U_B$
- Set target of desired switching point for switch output 2
- TEACH-IN switching point for switch output 2 with  $+U_B$

Comments: The order doesn't make any difference. If you want, you can set only one switching point.

### TEACH-IN normally-closed function

Switching point for switch output 2 < switching point for switch output 1

- Set target of desired switching point for switch output 1
- TEACH-IN switching point for switch output 1 with  $-U_B$
- Set target of desired switching point for switch output 2
- TEACH-IN switching point for switch output 2 with  $+U_B$

Comments: The order doesn't make any difference. If you want, you can set only one switching point. If both switching points are equal, the sensor works in close function.

### TEACH-IN detection of object presence

- Cover the sensor with the palm, or remove all objects from the detection range of the sensor
- TEACH-IN switching point for switch output 1 with  $-U_B$
- TEACH-IN switching point for switch output 2 with  $+U_B$

Comments

Only one switch output can be configured for detection of presence of objects. If the sensor detects an object within the maximum detection range, the switch output switches.

### Default setting of switching points

Switch output 1: unusable area


Switch output 2: nominal sensing range

### LED Displays


Displays in dependence on operating mode	Red LED	LED 1 yellow	LED 2 yellow
<b>TEACH-IN switching point 1</b>			
Object detected	off	flashes	off
No object detected	flashes	off	off
Object uncertain (TEACH-IN invalid)	flashes on	off	off
<b>TEACH-IN switching point 2:</b>			
Object detected	off	off	flashes
no object detected	flashes	off	off
Object uncertain (TEACH-IN invalid)	flashes on	off	off
Normal operation	off	switch state 1	switch state 2
Fault	on	previous state	previous state

## Characteristic Curves/Additional Information

### Characteristic response curve

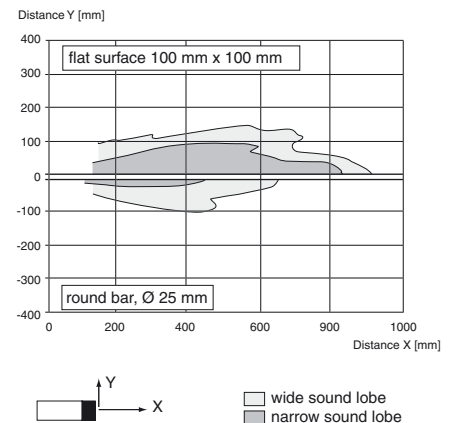

### Programmed switching output function

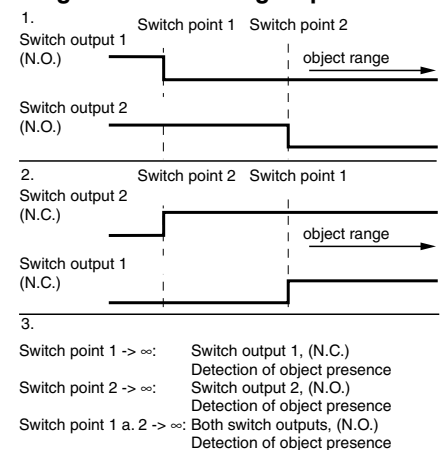

### Accessories

UB-PROG3  
Programming unit

OMH-04  
Mounting aid

BF 18  
Mounting flange

BF 18-F  
Mounting flange

BF 5-30  
Mounting flange

UVW90-K18  
Deviation reflector

V15-G-2M-PVC  
Cable connector

V15-W-2M-PUR  
Cable connector

### Adjusting the sound cone characteristics:

The ultrasonic sensor enables two different shapes of the sound cone, a wide angle sound cone and a small angle sound cone.

#### 1. Small angle sound cone

- switch off the power supply
- connect the Teach-input wire to  $-U_B$
- switch on the power supply
- the red LED flashes once with a pause before the next.
- yellow LED: permanently on: indicates the presence of an object or disturbing object within the sensing range
- disconnect the Teach-input wire from  $-U_B$  and the changing is saved



#### 2. Wide angle sound cone

- switch off the power supply
- connect the Teach-input wire with  $+U_B$
- switch on the power supply
- the red LED double-flashes with a long pause before the next.
- yellow LED: permanently on: indicates an object or disturbing object within the sensing range
- disconnect the Teach-input wire from  $+U_B$  and the changing is saved



### Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.